

# Xyron<sup>®</sup> 2" and 4" Runner Tips and Techniques

## Directions:

- Remove the cap at the top of the Runner
- Place the tip of the Runner on your surface with the Xyron logo facing up
- Tilt the Runner at a 45 degree angle
- Slowly pull the Runner across the surface to apply adhesive



## Changing the cartridge:

- Remove the cap at the top of the Runner
- Remove the side cap with the printed arrow
- Remove the cartridge
- Insert new cartridge
- Replace the side cap and lid



## Tips and techniques:

- Apply slowly for best results
- Make sure the side caps are properly locked in place
- Hold the unit at a 45 degree angle with the logo facing up for best results
- The unit is easiest to hold if you place your thumb underneath the unit and your remaining finger on the top (over the logo)
- Leave your cartridge in the retail box until ready for use
- Save the retail box to store refills if you change cartridges before the roll is empty
- If you have a build up of adhesive on the roller tip, carefully use an adhesive eraser to remove
- If there is excess liner at the end of the unit, remove the cartridge from the Runner and tighten material by lightly pushing in the bottom right gear and turning it clockwise

## The Xyron 2" and 4" Runners are great for:

- Paper crafts

- Scrabooking
- Card making
- Photos
- School and home projects
- Wrapping gifts
- Applying adhesive to larger surfaces

