



# Xyron Creative Station® Multi-Use Applicator

  
XYRON®  
User Guide

**Awesomely simple.**

# Contents

Features _____	04
Product Overview _____	05
Getting Started _____	07
Cartridge Guide _____	08
How to Unload/Load Cartridge _____	09
Application Use _____	12
Helpful Tips _____	15

# Features


---

## All-in-one laminator, sticker and magnet maker.



### Make what you want.

Easily transform almost anything with Permanent and Repositionable Adhesive, Laminated Adhesive, Two-Sided Laminate, and Laminated Magnet.

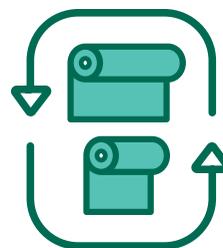

### Switch functions fast.

Quickly change drop-in cartridges at any time without hassle. Uses both 9" and 5" continuous roll cartridges to help minimize waste and maximize flexibility.



### Stay clean.

Ditch messy adhesives for professional results, all while keeping work surfaces, hands, and projects clean.



### Save time.

Get immediate results anywhere with processes that don't require warm-up, cool-down or dry time.

# Product Overview

---

machine front

Button access to cartridge

Alignment guides


Manual control handle

Collapsible —  
feed tray



# Product Overview

machine back and interior

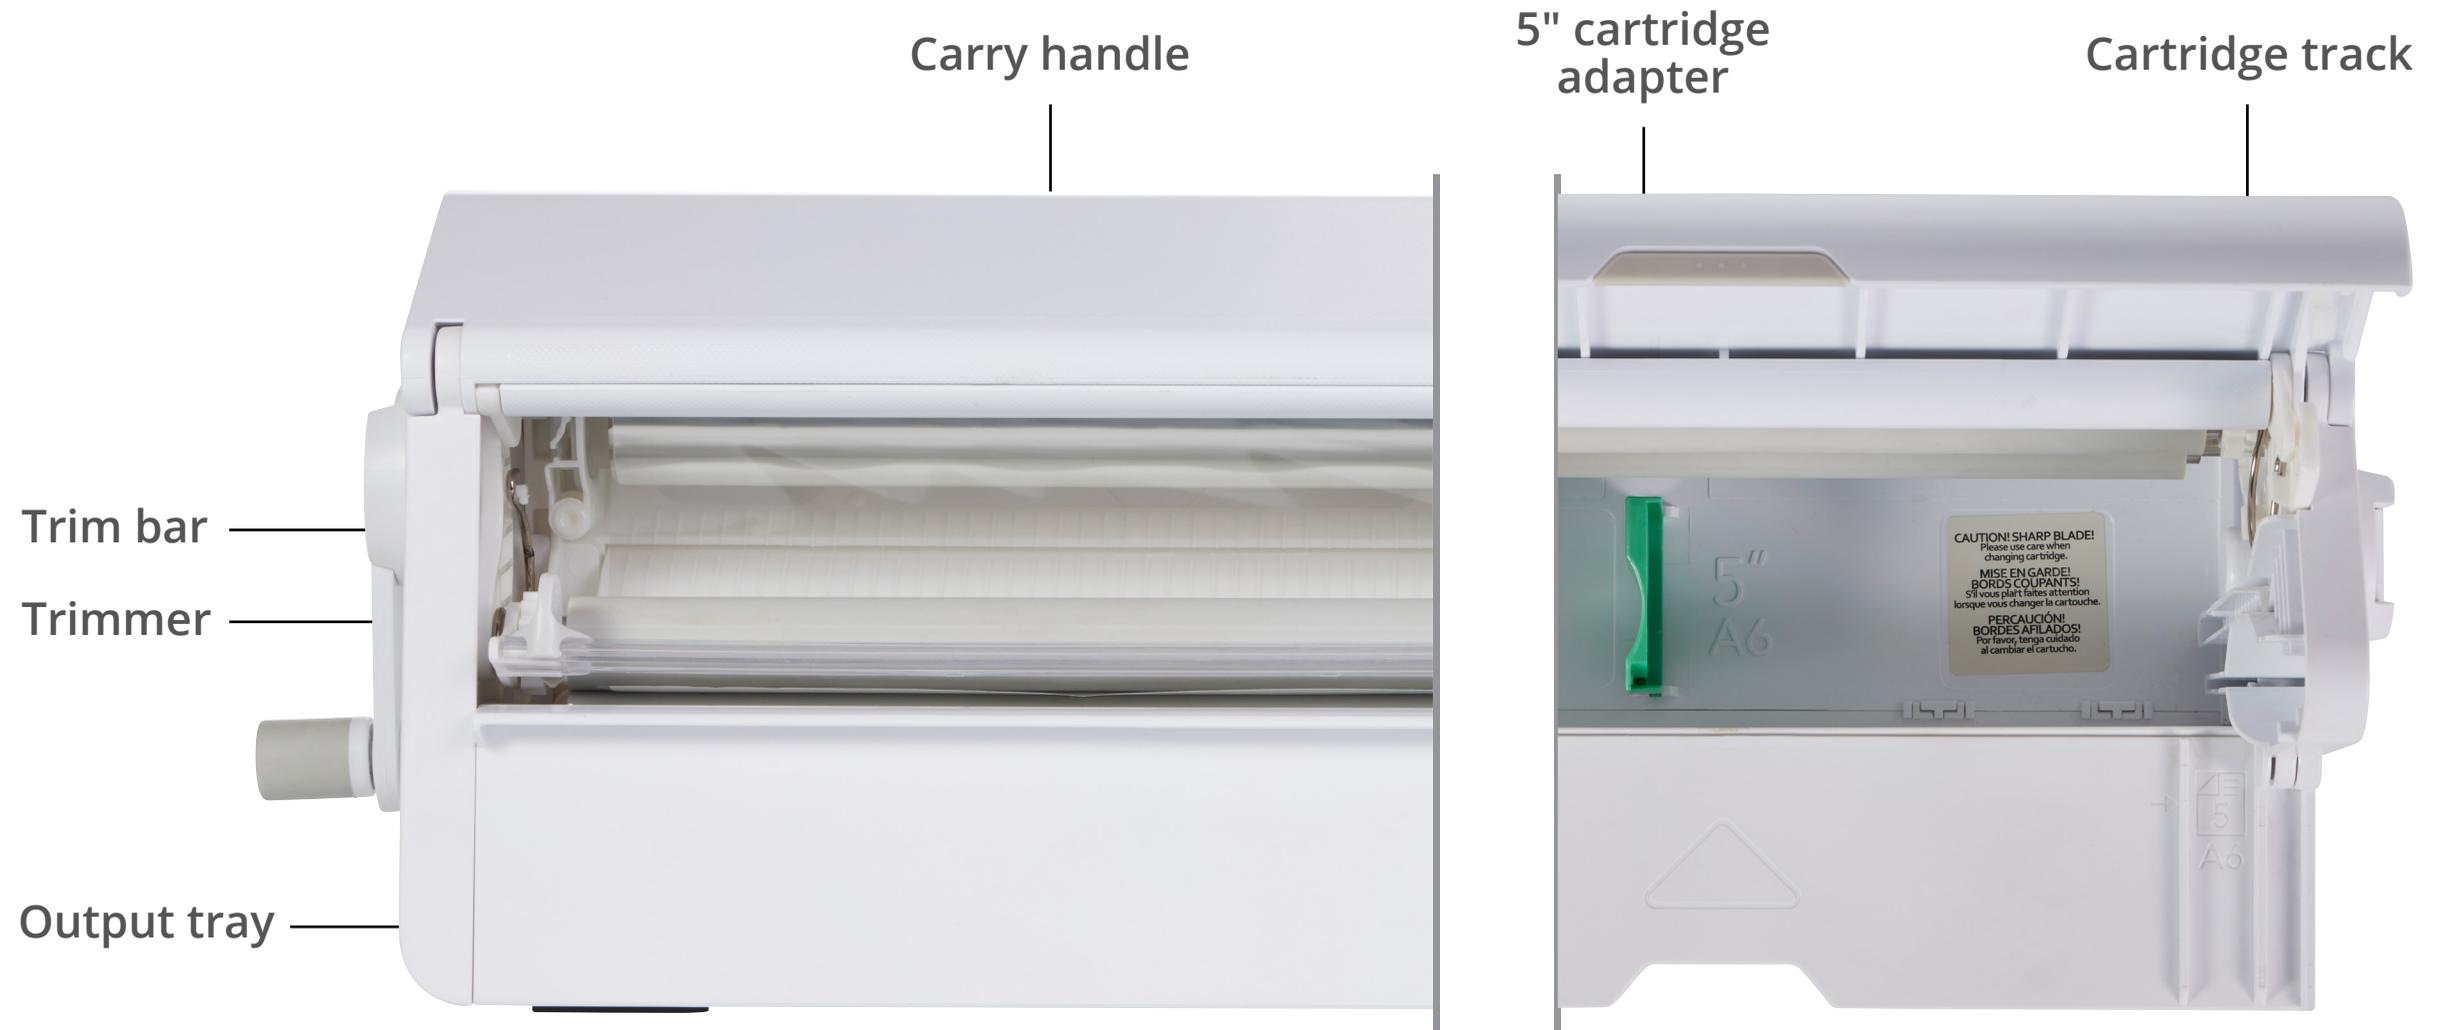

# Getting Started

Preloaded with 25 feet of permanent adhesive.



## 1 Feed.

Feed your item into the machine on the feed tray using the alignment guides.



## 2 Turn.

Turn the handle clockwise while you continue to feed the item completely through.



## 3 Trim.

Press down and slide trimmer to cleanly cut. Remove clear film and peel your sticker.

# Cartridge Guide

---

Xyron Creative Station® accepts 9" and 5" cartridges.



## Permanent Adhesive

Apply for a secure, reliable bond.

9" #AT905-40 | 5" #AT1605-18



## Repositionable Adhesive

Lift and reposition items easily.


9" #AT906-40 | 5" #AT1606-18



## Laminated Adhesive

Protect and permanently adhere.

5" #5102-08-00ML

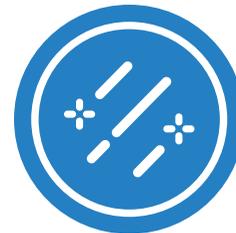

## Two-Sided Laminate

Preserve and protect documents.

9" #0902-01-40 | 5" #DL1601-18



## Laminated Magnet

Create durable magnets.

9" #LM907-10 | 5" #LM1601-7

Acid-free. Non-Toxic. Cartridges sold separately.

# How to Unload/Load Cartridge

---



**1** Open cartridge compartment by pushing button and lifting the lid.



**2** Pull cartridge up and out of the machine.



**3** Drop the cartridge into the machine using the internal tracks as a guide. The label on the cartridge should be facing you.


continued on next page

# How to Unload/Load Cartridge

continued



- 4** Place material flap between the 2 rollers.

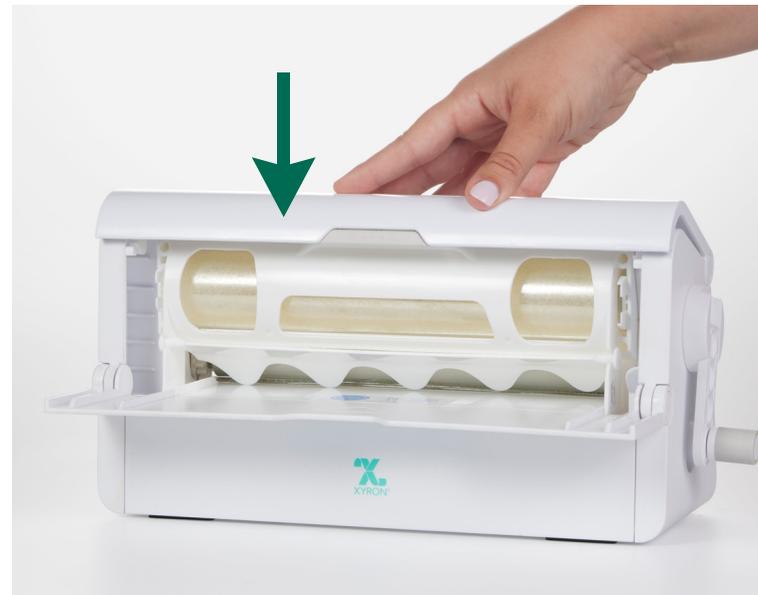

- 5** Close the lid by pressing down until it clicks into position.

For 5" Cartridges



Follow steps 1 and 2. Flip up the 5" cartridge adapter in the bottom of the machine. Proceed with step 3 using the adapter and the internal track as guides.

**Making made easy.**

# Application Use



Permanent Adhesive\*




Repositionable Adhesive



**1** After trimming from machine, rub item to ensure full adhesive transfer.



**2** Remove clear film.

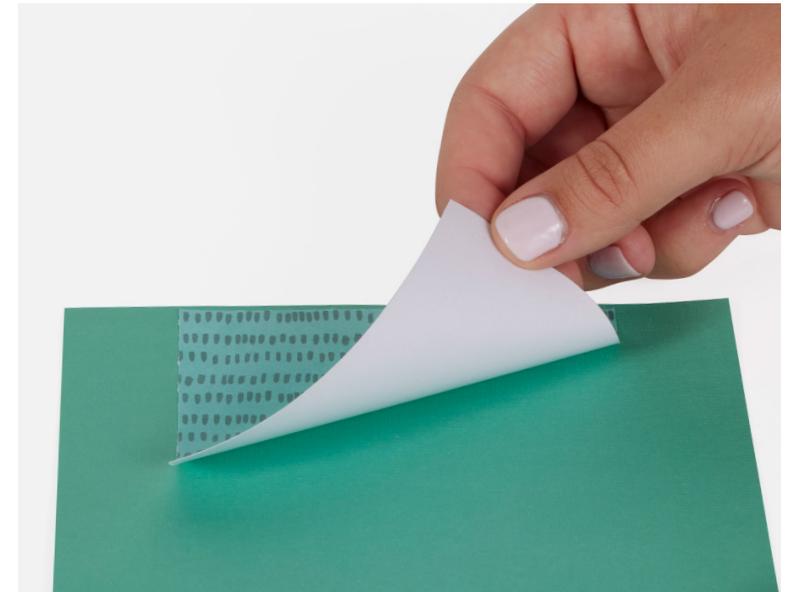

**3** Peel sticker from paper backing and apply.

\*only application with 3" cartridge

# Application Use

continued



## Laminated Adhesive\*



**1** After trimming from machine, cut item right up to the edge. Laminate will not peel.

**2** Peel laminated sticker from paper backing and apply.

\*5" cartridge only

# Application Use

continued



## Two-Sided Laminate



## Laminated Magnet



- 1 After trimming from machine, cut item right up to the edge. Laminate will not peel.

# Helpful Tips

---

## General Tips:

- For best results, turn handle slowly.
- Use items that are 1/8" thick or less.
- Arrange multiple items on feed tray to maximize cartridge use.
- Clean rollers with isopropyl alcohol as needed.
- Store your machine and cartridges in a cool, dry place.
- If your handle turns but nothing is coming out, be sure your lid is closed.
- Use a variety of materials: paper, cardstock, vellum, canvas, burlap, fabric, ribbon, twill, twine, craft foam, tissue paper, felt, cork, thin wood and acrylic, photos, paper flowers, thin metal sheets, and newspaper.

## Fabric Tips:

- Wash sizing from fabric.
- For items that will be washed, stitch after adhering.
- For best results, use Permanent Adhesive.

## Permanent and Repositionable Adhesive:

- When feeding multiple items, do not overlap to ensure edge-to-edge coverage.
- Remove excess adhesive with your finger or Xyron® Adhesive Eraser (sold separately).

## Two-Sided Laminate:

- **NOT recommended for one-of-a-kind items.**
- Before inserting your item, test a few inches to ensure no wrinkles are present.
- If a wrinkle occurs, fold a piece of cardstock to 4" x 4" and run it through the center of the machine until you see the laminate smooth out.



[www.xyron.com](http://www.xyron.com)

