



Xyron Mega Runner® Adhesive Applicator


XYRON®
User Guide

Unstoppable hold.

Contents

| | |
|------------------------------------|----|
| Features _____ | 04 |
| Product Overview _____ | 05 |
| How to Use _____ | 06 |
| Cartridge Guide _____ | 07 |
| How to Unload/Load Cartridge _____ | 08 |
| Helpful Tips _____ | 10 |


Features

Targeted adhesive applicator.




Stay clean.

Apply permanent dot matrix adhesive without the gummy mess.

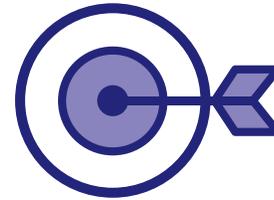

Be efficient.

Comfortable handle and accurate applicator put you in total control.

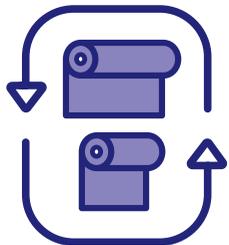

Change fast.

Easily refill or switch widths with drop-in cartridges.

Product Overview

front and underneath



How to Use

Preloaded with 100 feet of permanent adhesive.



1 Position.

Pull down protective cap to expose and position the adhesive tip to item surface.



2 Press.

Press down to apply even pressure.



3 Pull.

Slowly pull to run a strip of adhesive.

Cartridge Guide

Xyron Mega Runner® accepts 1/2" and 1/4" cartridges.



Permanent Adhesive

Apply for a secure, reliable bond.

1/2" #0702-05-00 | 1/4" #0702-12-25

Acid-free. Non-Toxic. Cartridges sold separately.

How to Unload/Load Cartridge



1 Open cartridge compartment by pushing button and lifting the lid.



2 Pull cartridge up and out of the applicator.



3 Drop the cartridge into the applicator.



4 Close the lid by pressing down until it clicks into position.

Making made easy.

Helpful Tips

General Tips:

- Our runner requires a slower motion to ensure the dots have enough time to release from the plastic liner.
- Keep adhesive tip level and apply even pressure for a full strip of adhesive.
- If plastic liner loops outside the cartridge when you pull your applicator off the item, use the tightening feature built into the cartridge to solve the problem. Remove the cartridge from the applicator and tighten by turning the top knobs clockwise with your fingers.
- Store your applicator and cartridges in a cool, dry place.
- Use a variety of materials: paper, cardstock, vellum, fabric, ribbon, twine, craft foam, tissue paper, wood, buttons, acrylic, photos, paper flowers, thin metal sheets, and newspaper.
- Remove excess adhesive with your finger or Xyron® Adhesive Eraser (sold separately).

Fabric Tips:

- Wash sizing from fabric.



www.xyron.com

